


Progressive Cavity Pump Parts Exploded View

www.libertyprocess.com

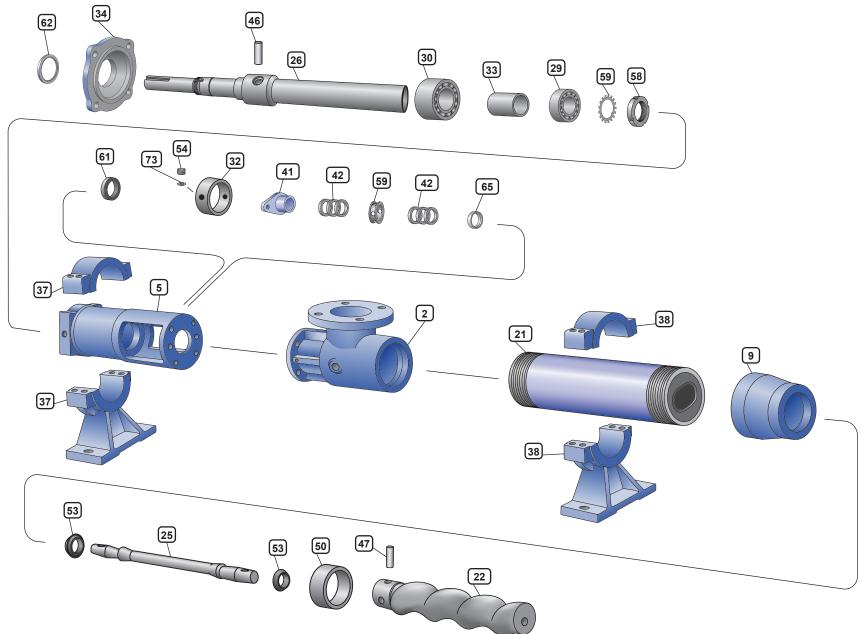




LIBERTY SERIES

Progressive Cavity Pump Parts Exploded View

Pump Components

- 29. Radial Bearing
- 30. Thrust Bearing
- 33. Bearing Spacer
- 58. Bearing Lock Nut
- 59. Bearing Lock Washer
- 61. Radial Grease Seal
- 52. Grease Seal Retainer
- 62. Thrust Grease Seal
- 34. Bearing Cover Plate
- 37. Suction Housing Support
- 57. Lantern Ring
- 5. Bearing Housing
- 38. Stator Support
- 49. Collar Pin Retainer
- 50. Rotor Pin Retainer
- 53. Connecting Rod Washer
- 25. Connecting Rod
- 47. Rotor Pin
- 46. Drive Shaft Pin
- 54. Drive Pin Retaining Screw
- 2. Suction Housing
- 9. Pump Reducer
- 26. Drive Shaft
- 41. Packing Gland
- 42. Packing
- 65. Packing Gland Insert
- 73. Drive Pin Washer
- 21. Stator
- 22 Rotor

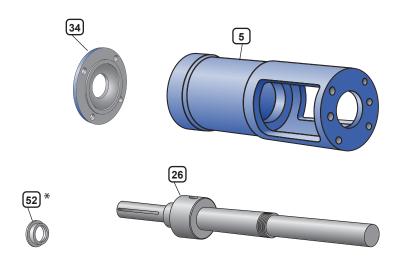

Parts above are for Liberty Series Pumps LL10, LL10H, LL12, LL12H * is for pump size LL10