





MILLENNIUM SERIES

Progressive Cavity Pump Parts Exploded View

Pump Components

- 1. Radial Grease Seal
- 2. Bearing Cover Plate
- 3. O-Ring
- 4. Drive Shaft Head
- 5. O-Ring
- 6. Primary Thrust Plate
- 7. Key
- 8. Ring Gear
- 9. Lock Nut
- 10 Gear Ball
- 11. Secondary Thrust Plate
- 12. Seal Support
- 13. Gear Joint Seal
- 14. Drive Shaft
- 15. Tapered Roller Bearing
- 16. Bearing Spacer
- 17. Bearing Lock Plug
- 18. Bearing Lock Nut
- 19. Thrust Grease Seal
- 20. Slinger Ring
- 21 Packing Gland Half
- 22. Packing
- 23. Lantern Ring

- 26. Bearing Housing
- 27. Retaining Ring
- 28. Clamp Ring
- 29. Suction Housing
- 30. Stator
- 31. Stator Support
- 32. Inspection Plate
- 33. Inspection Plate Gasket
- 34. Stator Gasket
- 35. Spiral Retaining Ring
- 36A. Stator Ring Clip
- 36B. Stator Clamp Ring
- 37. Discharge Flange
- 38. Connecting Rod
- 39. Gear Joint Shell
- 40. Rotor
- 41. O-Ring
- 42. Head Ring

Hardware

- A. Hex Head Screw (with lock washer)
- B. Shaft Key
- C. Flush Plug (stainless steel)
- D. Set Screw (with thread sealing compound)
- E. Socket Head Screw
- F. Hex Nut, Packing
- H. Stud Packing
- J. Zerk Fitting
- K. Pipe Plug
- L. Hex Head Bolt
- M. Hex Head Screw (with lock washer)
- N. Pipe Plug
- O. Hex Head Screw (with lock washer)
- P. Hex Head Screw (with lock washer)
- Q. Pipe Plug
- R. Hex Head Screw (with lock washer)
- T. Socket Head Screw